

How to use an interactive whiteboard



step 1 Touch interactive blue Crestron touchpad on desk

 
Find the Crestron user interactive touchscreen on the presenter's desk and to turn it on.

If its not already on tap the touchscreen.



Crestron touchpad

step 2 Select the **IWB Cam 1** icon on the top row of the Crestron touchscreen

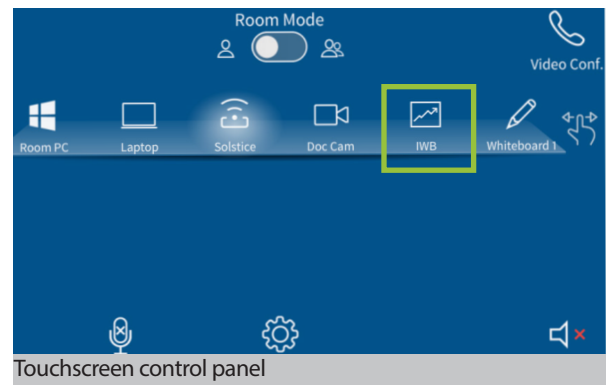


Touchscreen control panel

step 3 Wait for dual screens and comfort monitors to change display to blank white images

step 4 Go to the dual screens


step 5 Touch blue triangle on side of whiteboard to activate IWB

 - Watch as an interactive pop-up menu appears.
- With your stylus select a colour choice on pop-up menu.
- Write on the whiteboard with your finger or stylus.
- Delete drawn content by selecting the interactive eraser icon.

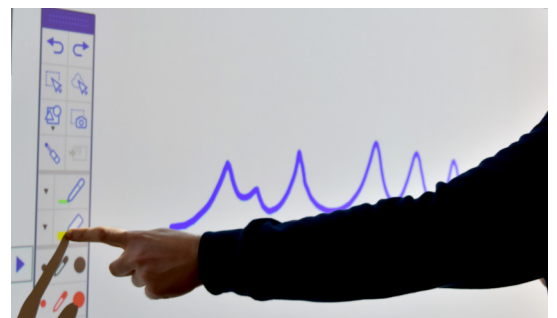

step 6 Advanced options

 Select Advanced and then sources/destinations on Crestron screen to change whiteboard camera destinations.

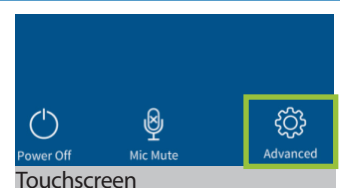

Touchscreen