

How to use a whiteboard camera

Step 1. Touch interactive blue Crestron touchpad on desk




Crestron touchpad

Step 2. Watch room turn on

Step 3. Wait until Solstice appears on large front dual screens and comfort monitors

Step 4. Select the WB Cam 1 / Whiteboard 1 icon on the touchscreen

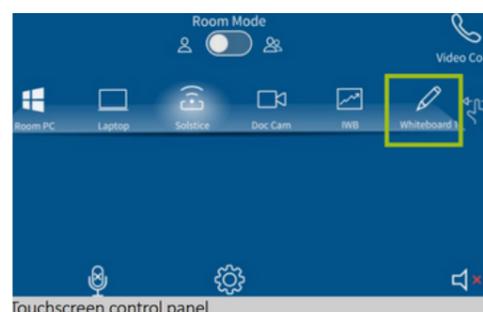

Touchscreen control panel

On the touchscreen select the **Whiteboard 1** icon on the top row of the screen.

* Note that the pencil icon might have a different name in your touchscreen, you can find it either as **WB Cam 1** or **Whiteboard 1**.

Step 5. Watch as the room whiteboard camera/s turn on

Wait for front dual screens and comfort monitors to change from showing Solstice displays to a video image of the whiteboard at the rear or side of a room. The default is to display on both the left and right-hand side screens.

Step 6. Use whiteboards

Step 7. Check comfort monitor

Step 7. Advanced options



Touchscreen

Select **Advanced** and then sources/destinations on Crestron screen to change whiteboard camera destinations

Whiteboard markers are only to be used on whiteboards and not on interactive whiteboards