

How to use a whiteboard camera



step 2 Touch interactive blue Crestron touchpad on desk



Crestron touchpad


step 3 Watch room turn on

step 4 Wait until Solstice appears on large front dual screens and comfort monitors

step 5 Select the **WB Cam 1 / Whiteboard 1** icon on the touchscreen

On the touchscreen select the **Whiteboard 1** icon on the top row of the screen.

* Note that the pencil icon might have a different name in your touchscreen, you can find it either as **WB Cam 1** or **Whiteboard 1**.

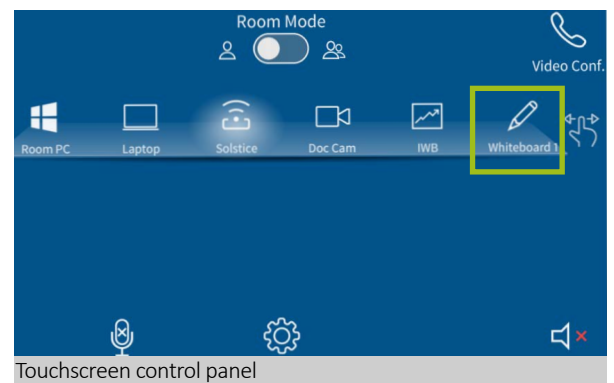

Touchscreen control panel

step 6 Watch as the room whiteboard camera/s turn on


Wait for front dual screens and comfort monitors to change from showing Solstice displays to a video image of the whiteboard at the rear or side of a room. The default is to display on both the left and right-hand side screens.

step 7 Use whiteboards

step 8 Check comfort monitors

step 9 Advanced options

Select **Advanced** and then sources/destinations on Crestron screen to change whiteboard camera destinations.

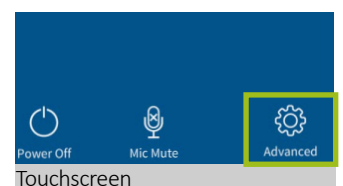

Touchscreen